



JAKOB, Inc.
 955 NW 17th Avenue.
 Suite B
 Delray Beach, FL 33445
 Telephone: 561-330-6502

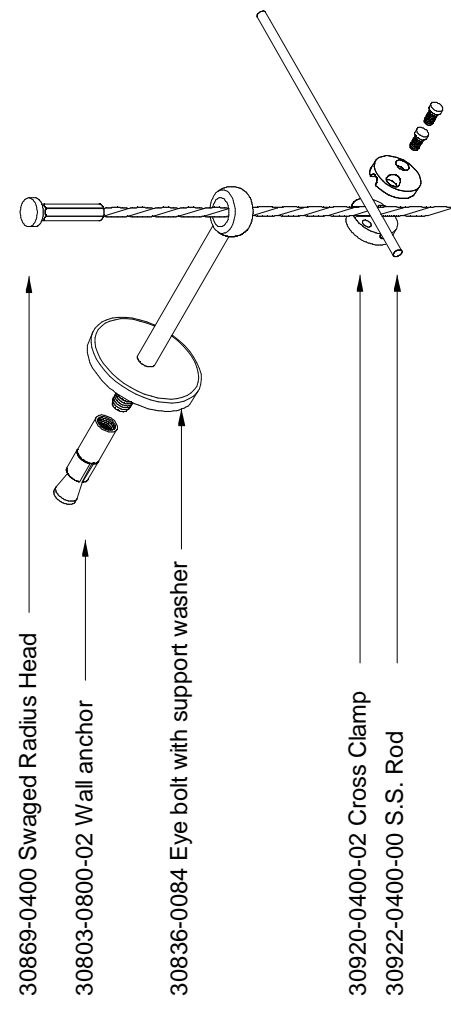

- 30869-0400 Swaged Radius Head
- 30803-0800-02 Wall anchor
- 30836-0084 Eye bolt with support washer


- 1-Install the anchors into the wall
 For concrete-masonry-bricks-use
 the part number: 30803-0800-02
- 2-Thread the eye bolt with cover disc
 into the anchors.
- 3-Repeat step 1 and 2 for the bottom.
- 4-Slide the cable from the top through
 the top eye bolt.
- 5-At the bottom thread the nuts as the
 drawing shows.
- 6-Tension the cable by tightening the
 the nuts

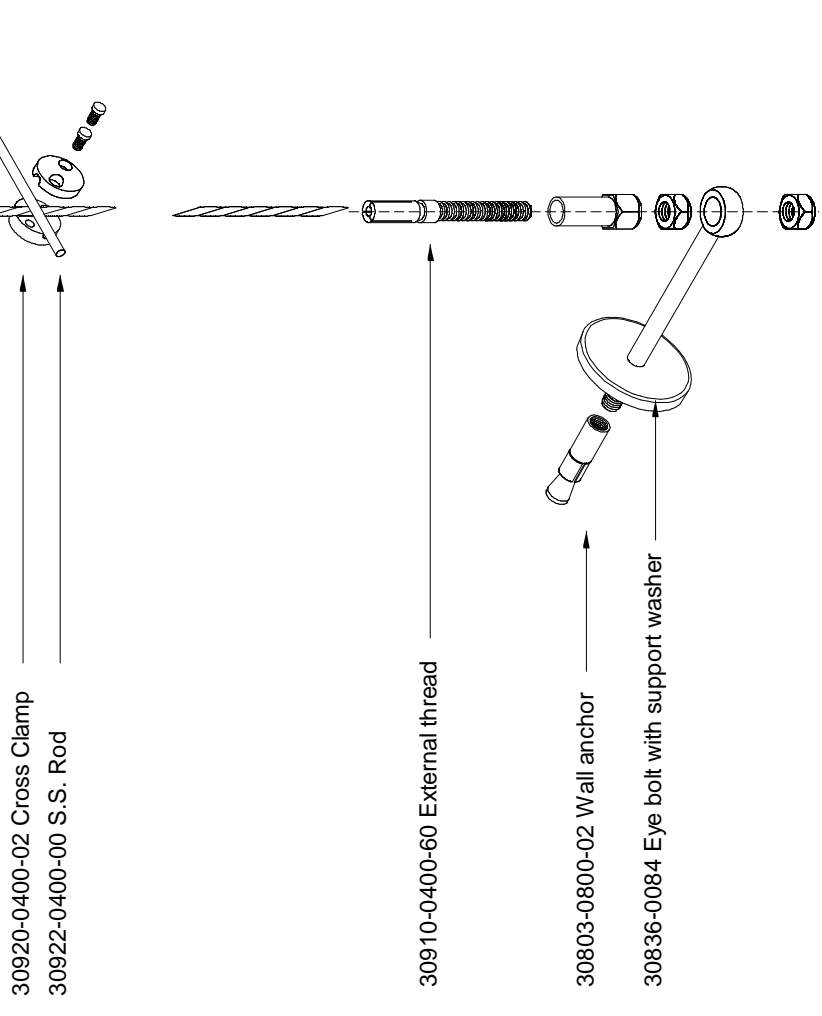



- 30920-0400-02 Cross Clamp
- 30922-0400-00 S.S. Rod
- 30910-0400-60 External thread
- 30803-0800-02 Wall anchor
- 30836-0084 Eye bolt with support washer

- 8-Attach rods using the cross clamps
- 9-To attach the cross clamp, position the
 rope and rod as shown and secure
 using the set screw.

7-8-9

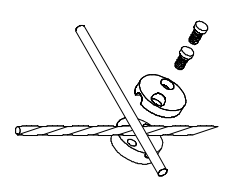

- 1-Disassemble the cable tensioner
- 2-Insert the rope into the sleeve
- 3-Then insert the sleeve into the
 tensioner body.
- 4-Thread 1 nut onto the cable tensioner.

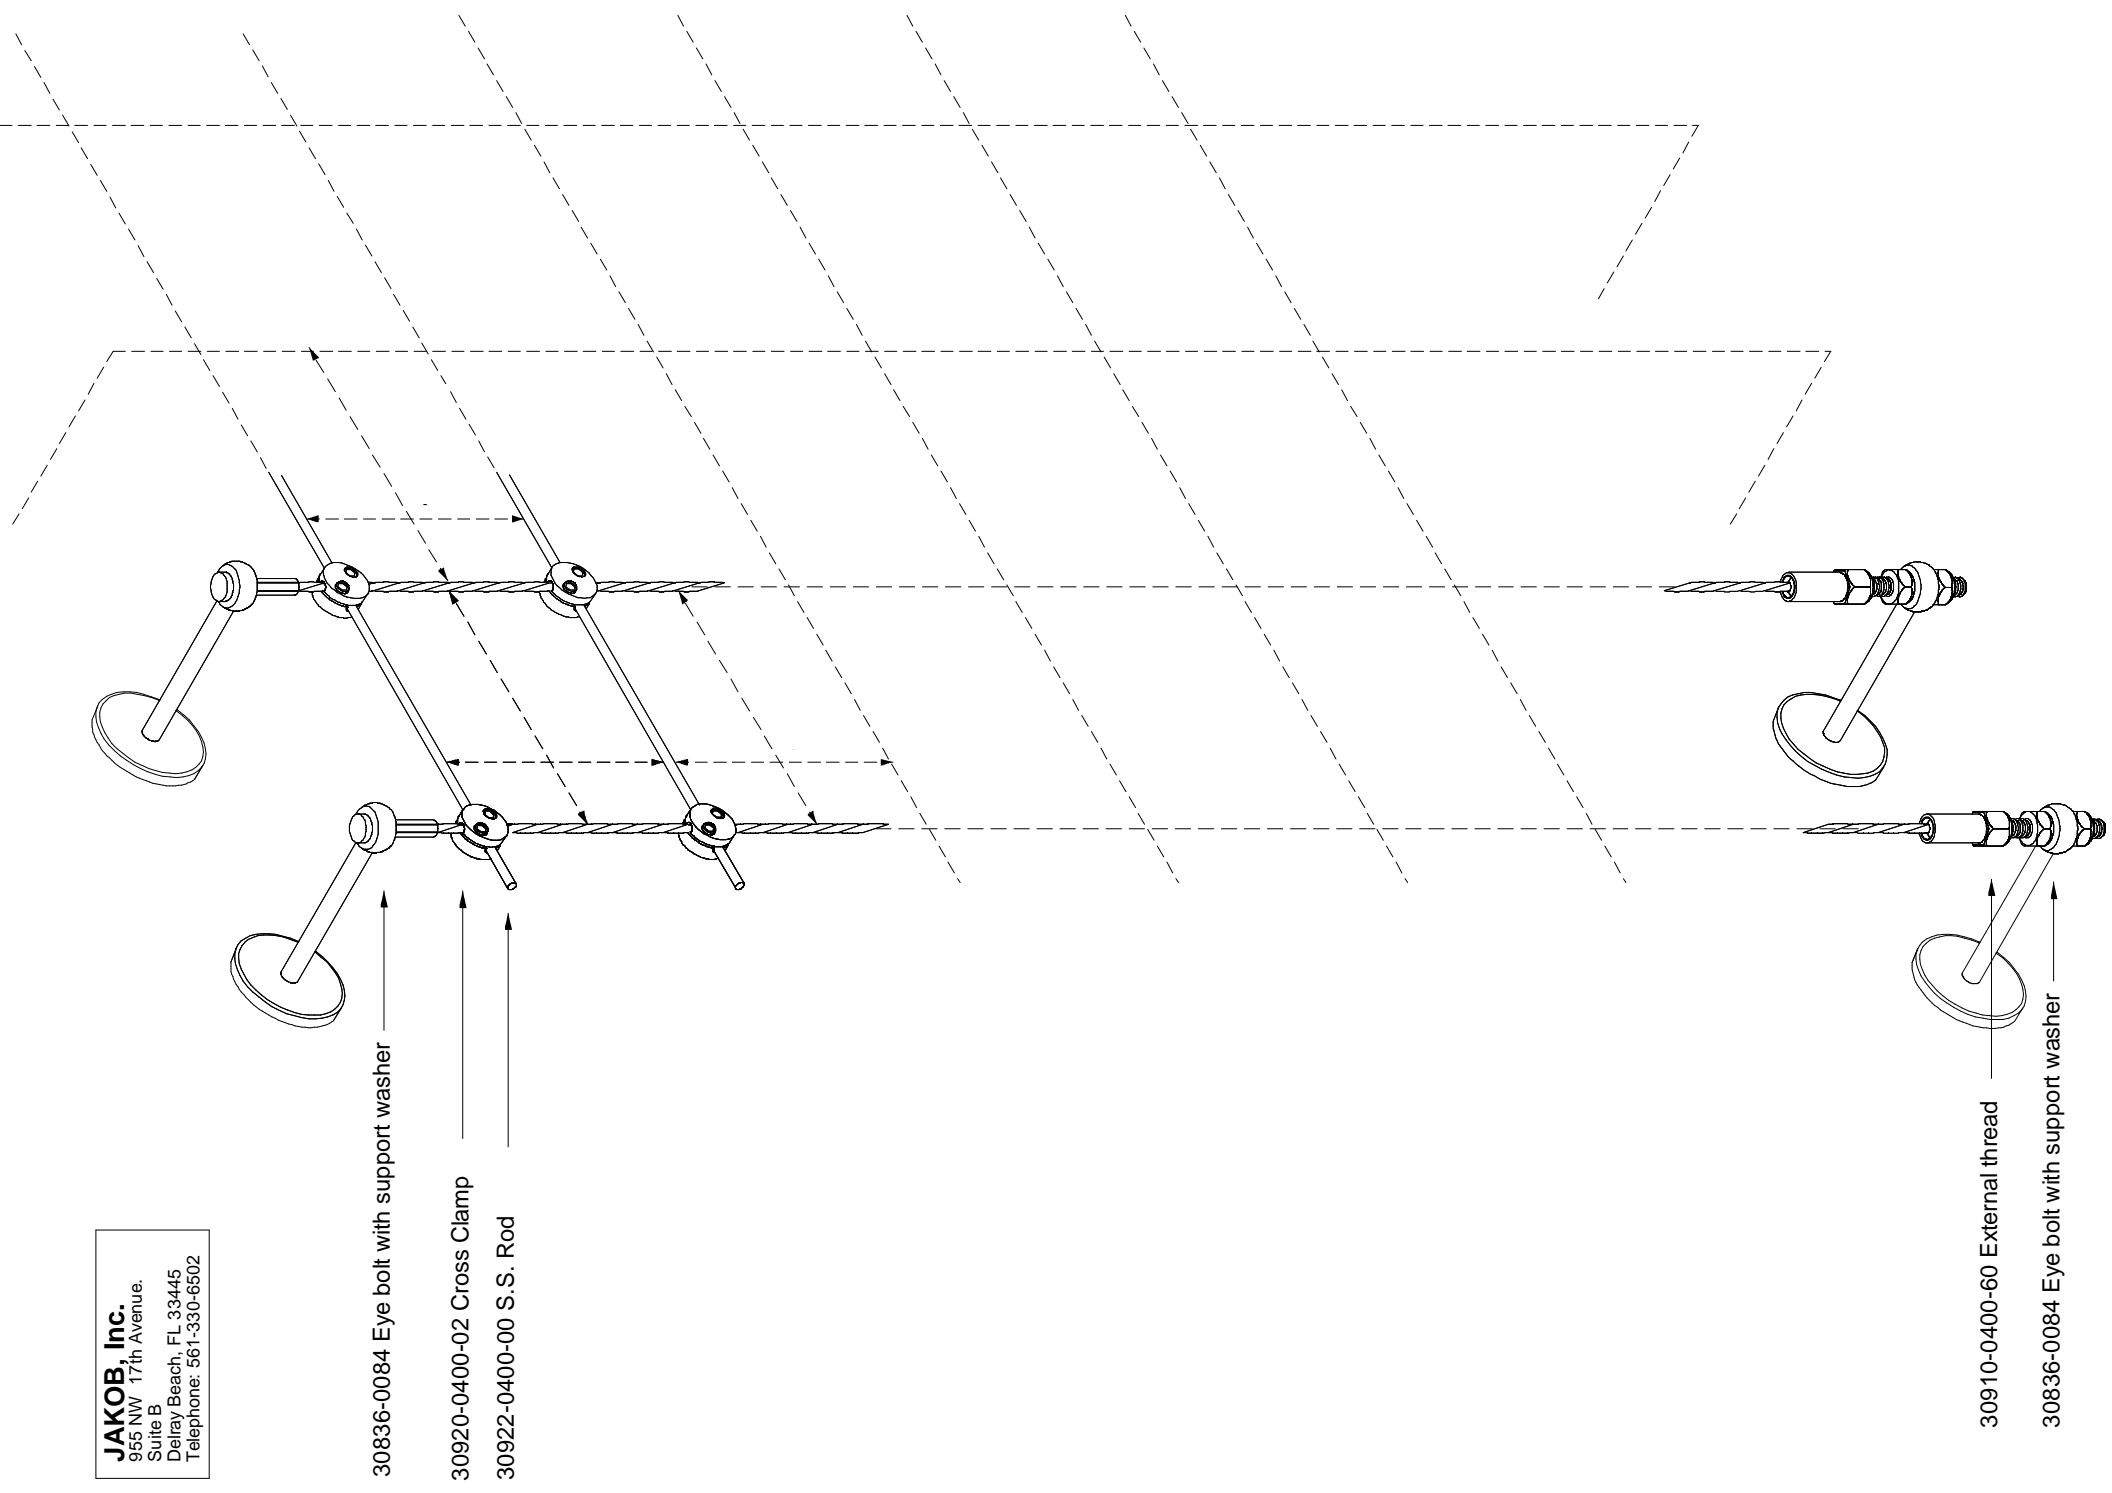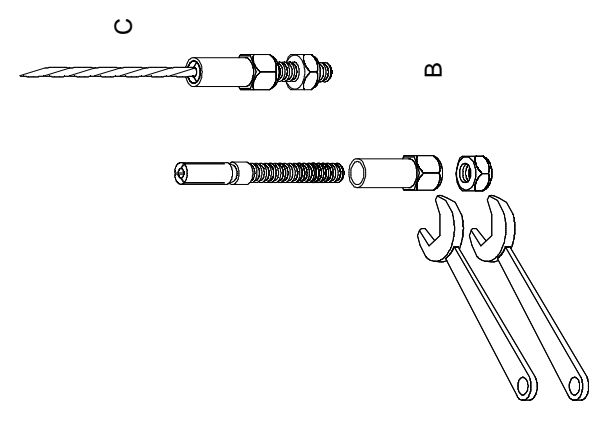

- 30836-0084 Eye bolt with support washer
- 30920-0400-02 Cross Clamp
- 30922-0400-00 S.S. Rod

- 30910-0400-60 External thread
- 30836-0084 Eye bolt with support washer